




Press **1234** on the control panel. The below message will be displayed.

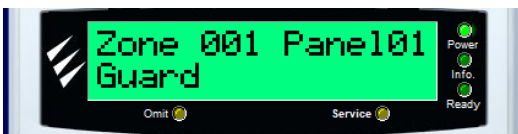

Press Yes ✓




Press any free zone number (eg: **009**) to learn your PW-W PIR



Note: In this case we're learning the sensor on zone 009.

Press reset button ↻

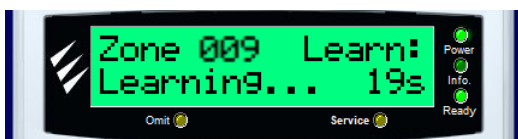

When it starts learning you need to insert the battery into the PW-W PIR



Press Yes ✓ till you reach zone type



Press **Yes** ✓ 7times to reach zone mode(wiring) & make zone wiring as "always awake"



Press **Menu** (☰) **two times** on the control panel and then press **Yes** to logoff from your control panel

Frequently Asked Questions:

1. What would be the maximum height at which the PIR can be placed?

Ans: The maximum height is 2.4mts & below image will give you an idea for height & distance it covers.

