




Press **1234** on the control panel. The below message will be displayed.




Note: In this case we're learning sensor in zone 105.

Press **Yes** ✓

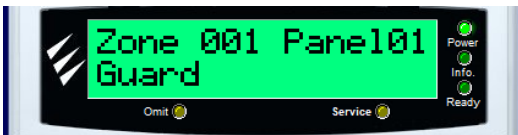


Note: Before learning the sensor we need to place the jumper in relearn

Press any free zone number (**eg: 105**) to learn your Impaq contact-W

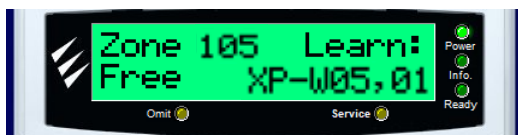


Press **reset** button ↻

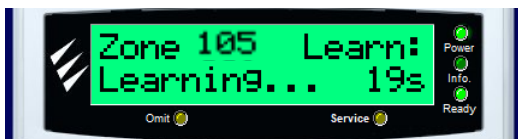

When it starts learning you need to insert the battery into the Impaq contact-W



Press **Yes** ✓ till you reach zone type

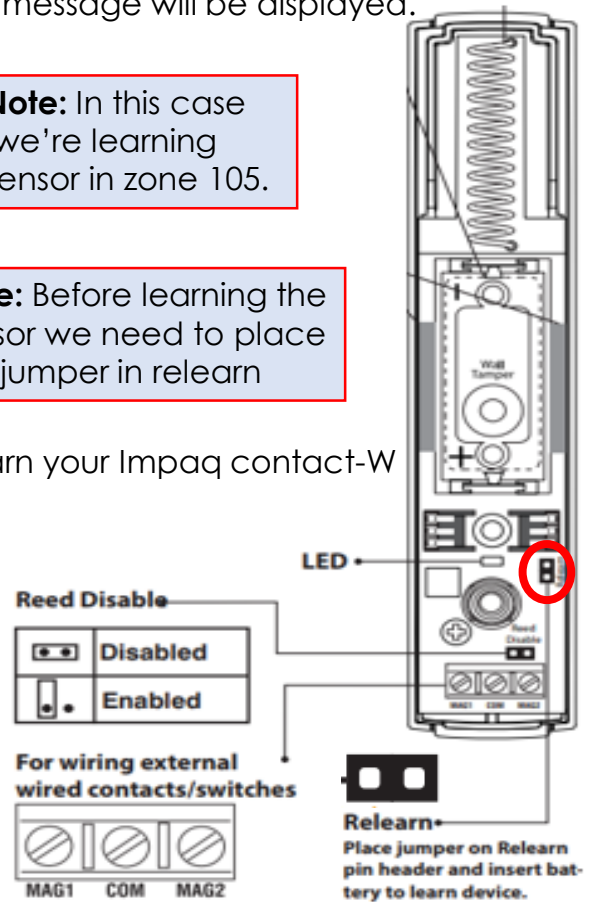



Press **Yes** ✓ 7times to reach zone mode(wiring) & make zone wiring as "always awake"



Press **Menu** (☰) **two times** on the control panel and then press **Yes** to logoff from your control panel

Frequently Asked Questions:


1. What would be the maximum distance between the device and magnetic contact?

Ans: The magnetic contact distance is

	Non-Ferrous Mounting Material	Ferrous Mounting Material
Maximum Break	30mm	15mm
Minimum Make	15mm	5mm

2. How to convert third party wired sensors to wireless sensor?

Ans: Inside the device we have an option for converting the third party wired sensors to wireless sensor by using MAG1 & COM or MAG2 & COM.

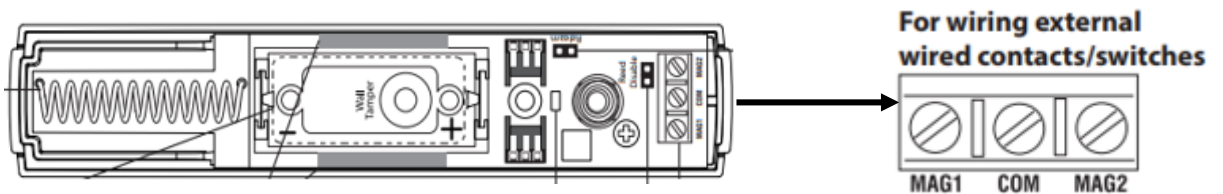

3. How to identify the status of sensor using LED?

Ans: Below are the details of the LED status.

Colour Status	Description
Flashing Green	With all contacts secure, will flash every 3 seconds.
Red	Indicates either the reed switch or external contact are active.