


Premier Elite Impaq Plus with Contact (AED-0009)



Hardware Connection:

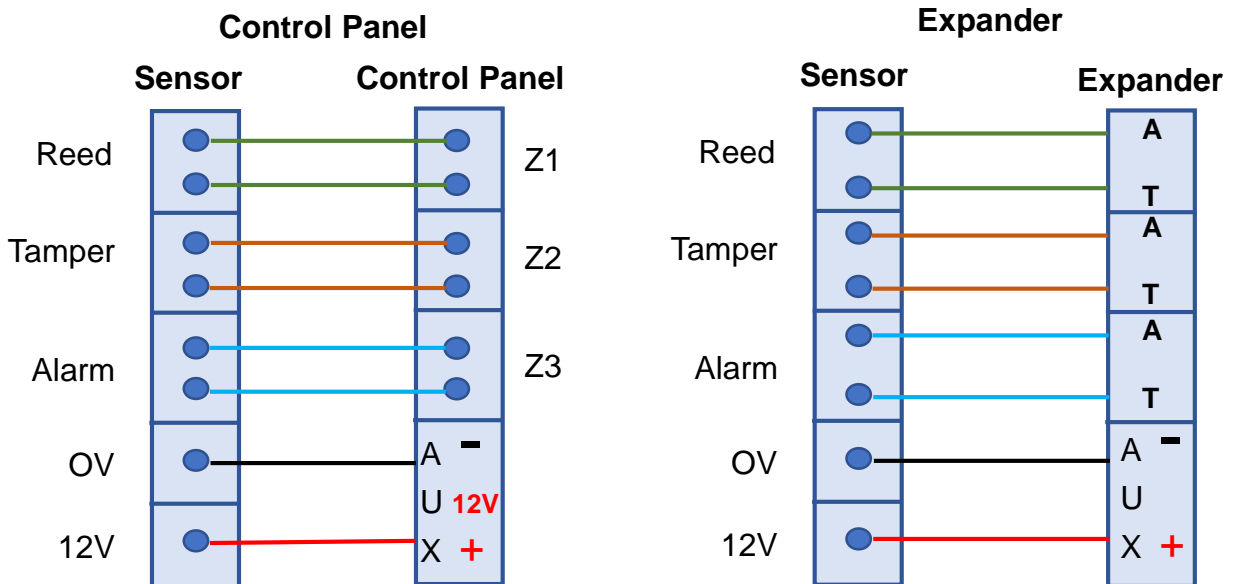


Programming:

Press 1234 on the control panel. The below message will be displayed.




Step 1:

Press Yes ✓

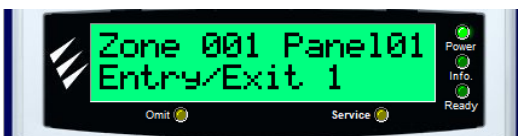


Press NO (X) to edit the option & Press 3 to change the zone type

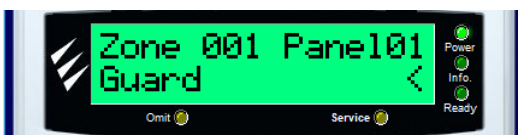

Note: In this case we're connecting sensor in Zone 001 for reed(Magnetic Contact).
Zone 002 for alarm(Vibration sensors).
Zone 003 for tamper

Note: If you want to enable and use:
1. Magnetic Contact – Follow Step 1
2. Vibration sensors – Follow Step 2
3. Tamper – Follow Step 3


Press Yes ✓

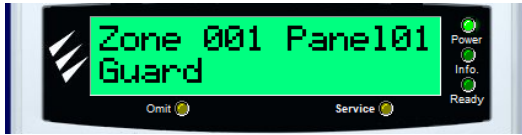

Press Yes ✓ for 7 times to reach zone wiring



Press NO (X) to edit the option

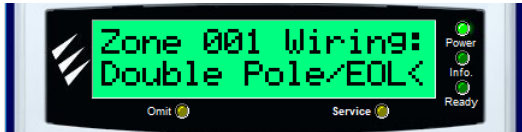


Press up arrow (↑) 2 times & press Yes ✓




Press 002 & Press Yes ✓ 3 times to reach zone type

Step 2:

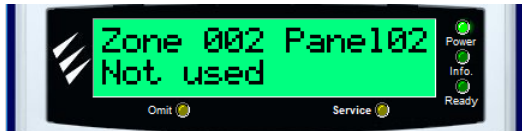


Note: In this case we are connecting sensor in Zone 001 for reed(Magnetic Contact).
Zone 002 for alarm(Vibration sensors).
Zone 003 for tamper


Press NO (X) to edit the option and Press 3

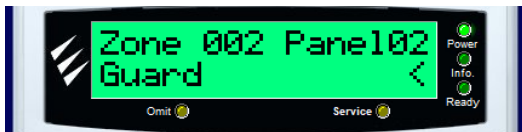

Press Yes ✓

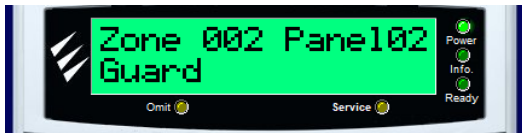

Press Yes ✓ for 7 times to reach zone wiring

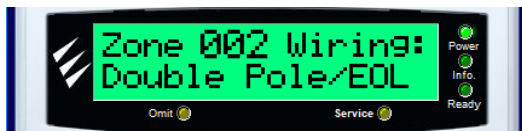

Press NO (X) to edit the option



Press up arrow (↑) 2 times & Press Yes ✓




Press 003 & Press Yes ✓ 3 times to reach zone type


Step 3:



Press NO (X) to edit the option and Press down arrow (↓) for 13 times to reach tamper

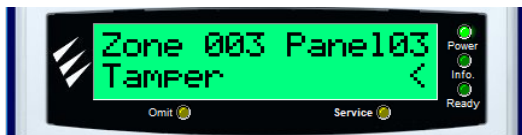

Press Yes ✓

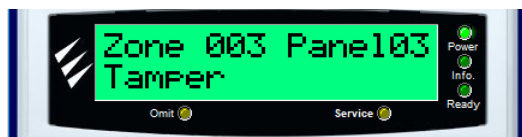

Press Yes ✓ for 7 times to reach zone wiring



Press NO (X) to edit the option



Press up arrow (↑) 2 times & Press Yes ✓



Press Menu (☰) two times on the control panel and then press Yes ✓ to logoff from your control panel

Note: In this case we are connecting sensor in Zone 001 for reed(Magnetic Contact).
Zone 002 for alarm(Vibration sensors).
Zone 003 for tamper