




### Step 1:


Press **1234** on the control panel. The below message will be displayed.




Press **Yes** ✓

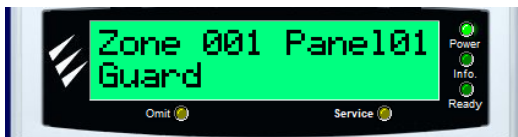

Press any free zone number (**021**) to learn your hooter

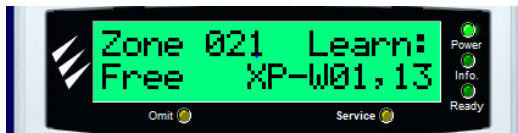

Press reset button ↻

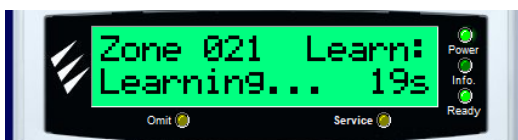

When it starts learning you need insert the 8 Batteries into the hooter




**Caution:** Do not change Zone type & Wiring type.



Press **Menu** (☰) **two times** on the control panel and then press **Yes** to logoff from your control panel

## Step 2:

You should Power ON by placing the Jumper.

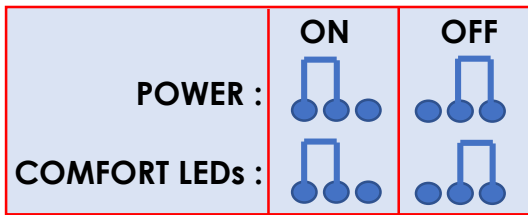

**Caution:** If Hold-Off mode is invoked but the tamper circuit is not opened or remote power is not removed within 15 mins then Hold-Off will automatically start to cancel, indicated by the LEDs alternating rapidly for a further 2 minutes.

## FAQ:

1. How to identify the LED status, when the hooter is not getting activated?

Summary of LED States	
Slow flashing LEDs	Normal operation
Left LED flashing only	Hold-Off active, tamper circuit open
Right LED flashing only	Hold-Off active, tamper circuit closed
Fast flashing Right LED	Hold-Off active, remote power removed
Fast flashing LEDs	Hold-Off active but will cancel within 2 minutes

2. Where do I place the 8 batteries in the wireless hooter?

**Ans:** The right side image will give you an idea on placing of 8 batteries inside the hooter & here only 4 batteries will be visible & rest 4 batteries will come back to it.

