

Connecting Keyfob

Press 1234 on the control panel. The below message will be displayed.



Press 8 to reach "Setup Users"



Press Yes ✓ (Will show you the free User as below)

 


Press arrow button (↓ or ↑) to select the required User




Note: In this example, we selected Master user

Press Omit button (🏠) to select the required User



 
Press No button (X) it will start learning process



During this learning process you need to power on the keyfob by holding the power button for 4 seconds. once the device is learned will show as below.



Press Menu (☰) three times on the control panel and then press Yes to logoff from your control panel

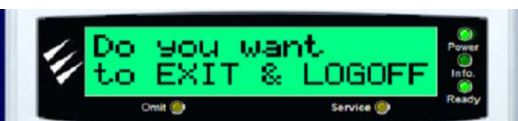

## FAQ:

### 1. How to arm the alarm panel through Keyfob?

- a. Power on the keyfob by holding the power button (🔌) for 4 seconds.
- b. LED status will show in Blue colour.
- c. Press & hold for 2 seconds with arm button (🔒).
- d. Then Arm LED status will indicate in Red colour.

### 2. How to disarm the alarm panel through Keyfob?

- a. Power on the keyfob by holding the power button (🔌) for 4 seconds.
- b. LED status will show in Blue colour.
- c. Press & hold for 2 seconds with disarm button (🔓).
- d. Then disarm LED status will indicate in Green colour.

### 3. How to part arm the alarm panel through Keyfob?

- a. Power on the keyfob by holding the power button (🔌) for 4 seconds.
- b. LED status will show in Blue colour.
- c. Press & hold for 2 seconds with Part Arm button (🏠).
- d. Then part arm LED status will indicate in orange colour.

**Note:** The SmartKey will power off after 20 seconds of no activity.

### 4. How to activate panic alarm through keyfob?

- a. Power on the keyfob by holding the power button (🔌) for 4 seconds.
- b. LED status will show in Blue colour.
- c. Press and hold disarm (🔓) & power (🔌) button together for 4 secs.
- d. All 3 LED's will start flashing together.

### 5. How to identify the Alarm Status LED's?

- a. Green LED on = Disarmed
- b. Orange LED flashing = Part Arming
- c. Orange LED on = Part Armed
- d. Red LED flashing = Arming
- e. Red LED on = Armed
- f. All 3 LED's flashing together = Alarm
- g. All 3 LED's cycling = Panic Alarm